

CR 120 Condor Milk meter

Important information



Turbine type flowmeters are susceptible to blockage due to debris in the liquid.

For calf milk it is important to ensure there is no foreign matter (cow hair etc) in the milk. If necessary, strain the milk through a stocking or similar medium.

If the meter is not reading accurately or not at all, first check the turbine is free to turn when blowing through the meter (not with compressed air). If not it may have debris preventing it from turning freely.

The meter can be serviced by removing the aluminium ring by hooking it out with a bent screwdriver or similar, the guide and rotor can then be removed and cleaned. Reassemble and secure the ring by tapping back in place with a socket or tube the size of the meter. This meter can also be calibrated see instructions included

